

MANUAL USE OF LED WATCH-INSTRUCTIONS

Power


Insert four Cr2016 batteries to power the device, the RED LED WATCH also can use two Cr2032 batteries as power. Change the batteries when the luminosity is too weak.

Features

It has 72 super bright LED lights that display the time as well as the month and date. It can light up automatically every 15 minutes and can adjust bright degree

Read Time

Press button A once for time, press button A twice for month and date.

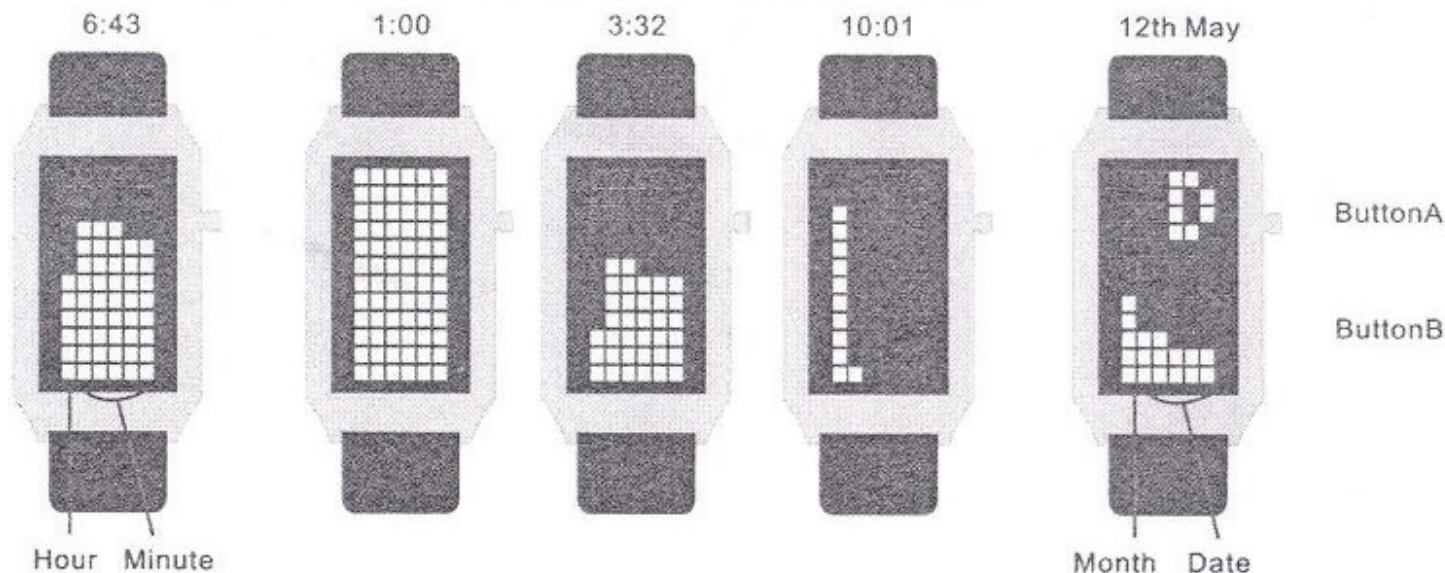


Set Time

- 1) Press button B and on the top right corner will display a(A) for AM or (P) for PM. The left column (Hours) will flash and you can press button A to move the hours along to set AM or PM.
- 2) Press button B again and the minutes will flash, press button A to set the minutes.
- 3) Press button B again and a(D) will display at the top right corner. This represents the date. The left column displays at the months from 1 to 12, 1 being January and 12 being December.
- 4) Press button B again and the (D) is still displayed but the date will flash. Press button A to set the date.

Depending on the month you select the date will adjust automatically. But it will not adjust on Feb 28th, a leap year. Once every 4 years.

- 5) Press button B again, the top right corner will display "L" and the left bottom will display a number. The "L" means the luminosity, the number means the bright degree. The number is bigger, the luminosity is brighter. Continuously press button A to choose luminosity.
- 6) Press button B again and a "NO" or "OK" will display. "NO" means the light up feature won't automatically display every 15 minutes. "OK" means the light up feature will automatically display every 15 minutes. Press button A to choose "OK" or "NO".
- 7) Press button B again to turn off the time setting mode.

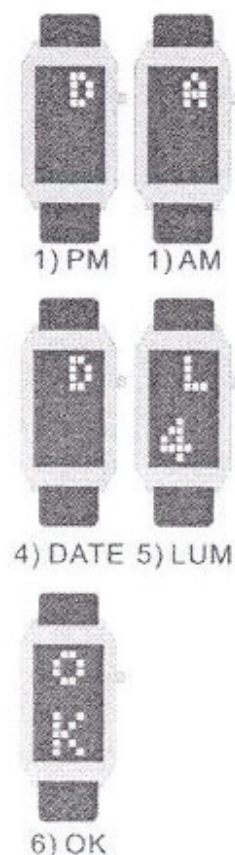

Water Resistant

The watch can be simple waterproof. It means the watch should not get wet. You should always take the watch off before taking a shower or doing the dishes.

Warranty

The warranty covers one full year from manufacture's defect.

This does not include:

- Broken Glass
- Damage due to abuse
- Water Damage