


---

# Danish Design

---

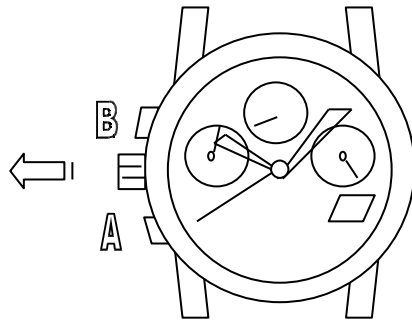

## 1. Use of the chronograph:

- Press button "A" once. The chronograph will start.
- Press button "A" again. The chronograph will stop.
- Press button "B" once. The hands will reset to their original 12 o'clock position.

## 2. Resetting the movement:

- Pull out the crown completely. Button "A" will adjust the seconds counter.
- The time can be changed by turning the crown when it is completely pulled out.
- Pull out the crown one step in order to change the date. Please don't change the date between 9 o'clock in the evening and 1 o'clock during the night in order to prevent damaging to the date movement.

## 3. Explanation of the dial and hands:

- Right : Minute counter
- Left : 24-Hour indicator
- Top : Seconds hand
- Center : Seconds counter

## Q712 serie

IQ12Q712, IQ13Q712, IQ15Q712, IQ16Q712, IQ17Q712, IQ18Q712,  
IV11Q712, IV12Q712, IQ13Q712, IV15Q712, IV17Q712



### 1. Bediening van de chronograaf:

Druk op knop “A” om de chronograaf te starten.

Druk nogmaals op “A” om de chronograaf weer te stoppen.

Door op knop “B” te drukken wordt de chronograaf op nul gezet.

### 2. Het gelijkzetten van de chronograaf en tijd:

Trek de kroon volledig uit. Knop “A” verzet de secondeteller.

De tijd kan veranderd worden door aan de kroon te draaien als deze volledig is uitgetrokken.

Trek voor de datum de kroon één stapje uit. A.u.b de datum niet verzetten tussen 9 uur 's avonds en 1 uur 's nachts, dit om beschadigingen aan het datumwerk te voorkomen.

### 3. Verklaring van de wijzers en tellers:

Links : de 24-uursaanduiding van de tijd

Rechts : de minutenteller

Boven : de secondewijzer

Midden : de secondeteller van de chronograaf